


TH-T-818 Air Screw Driver

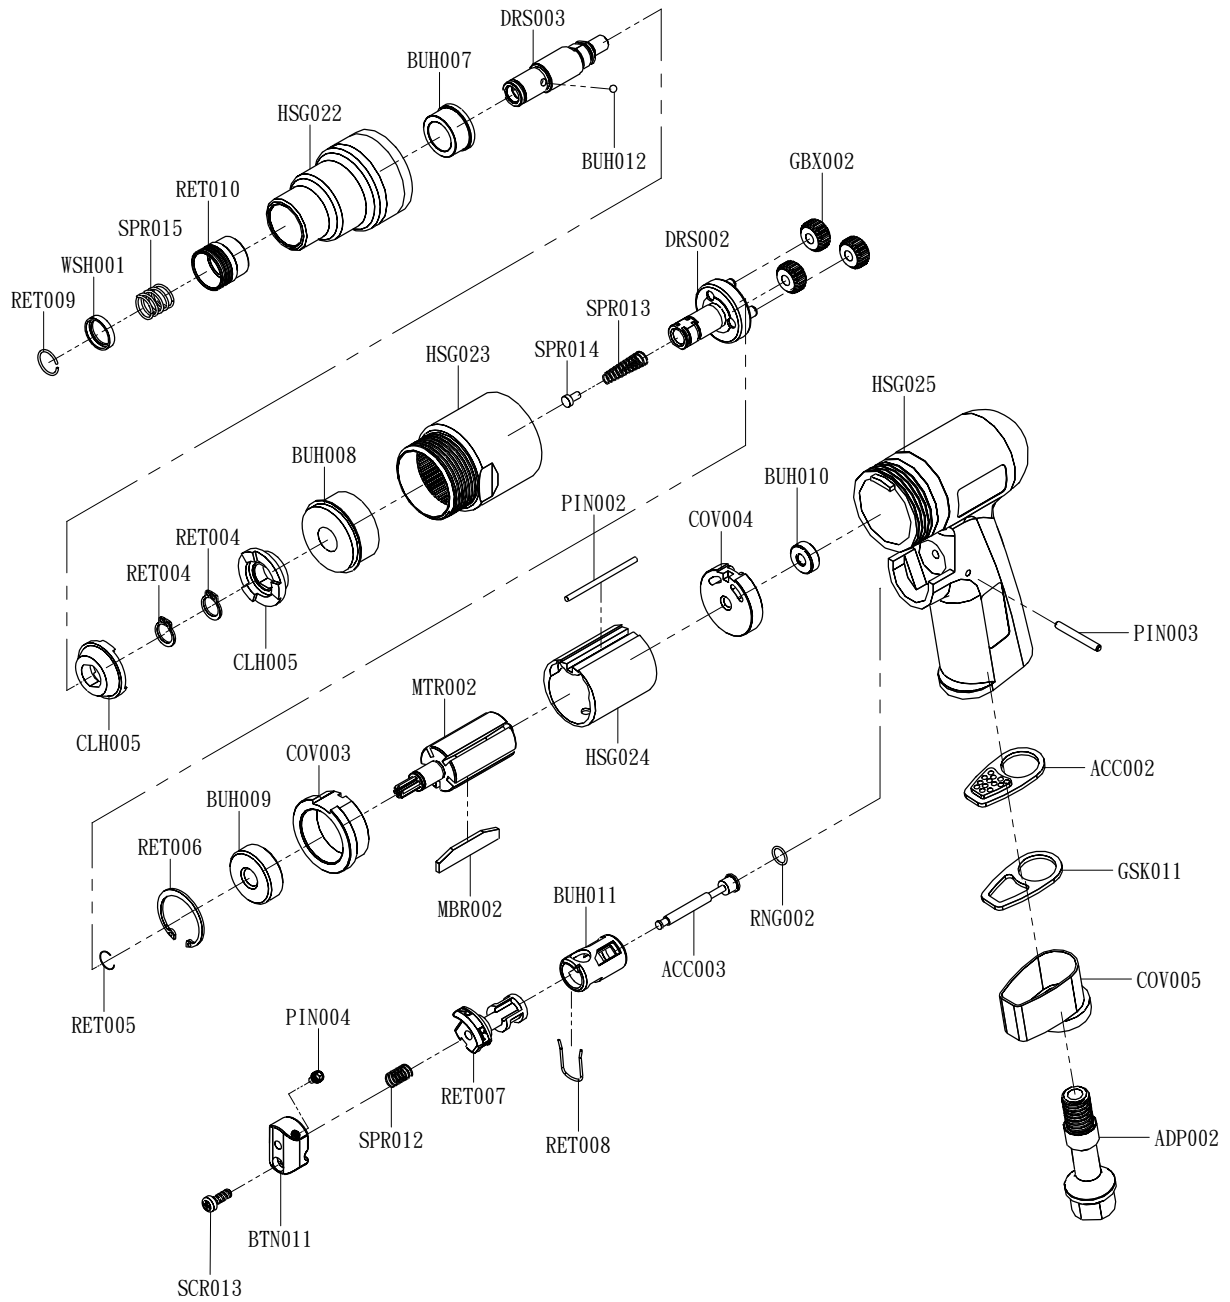

PARTS NO.	Description	Q' ty	PARTS NO.	Description	Q' ty	PARTS NO.	Description	Q' ty
TH-P-818-SPR012	TRIGGER SPRING	1	TH-P-818-SPR015	CHUCK SPRING	1	TH-P-818-CLH005	CLUTCH	2
TH-P-818-BTN011	TRIGGER	1	TH-P-818-COV005	MUFFLER COVER	1	TH-P-818-BUH010	BALL BEARING	1
TH-P-818-SCR013	RETAINING SCREW	1	TH-P-818-GSK011	GASKET	1	TH-P-818-DRS002	WORK SPINDLE	1
TH-P-818-ACC002	DIFFUSER	1	TH-P-818-ADP002	HOUSE ADAPTER	1	TH-P-818-HSG023	GEAR HOUSING	1
TH-P-818-PIN004	TRIGGER SPRING	1	TH-P-818-HSG022	CLUTCH HOUSING	1	TH-P-818-RET005	RETAINING RING	1
TH-P-818-RET007	RETAINING VALVE	1	TH-P-818-BUH012	STEEL BALL	1	TH-P-818-BUH008	BALL BEARING	1
TH-P-818-BUH011	VALVE BUSHING	1	TH-P-818-PIN003	TRIGGER PIN	1	TH-P-818-SPR013	SPRING	1
TH-P-818-RET008	SPRING CLIP	1	TH-P-818-RET004	RETAINING RING	2	TH-P-818-SPR014	SPRING GUIDE	1
TH-P-818-RNG002	WASHER	1	TH-P-818-HSG024	CYLINDER	1	TH-P-818-COV003	FRONT PLATE	1
TH-P-818-ACC003	VALVE	1	TH-P-818-PIN002	PIN	1	TH-P-818-MBR002	ROTOR BLADE	5
TH-P-818-RET009	RETAINING RING	1	TH-P-818-GBX002	PLANET GEAR	3	TH-P-818-DRS003	WORK SPINDLE	1
TH-P-818-BUH007	SLEEVE BEARING	1	TH-P-818-MTR002	ROTOR	1	TH-P-818-RET006	RETAINING RING	1
TH-P-818-WSH001	WASHER	1	TH-P-818-COV004	REAR PLATE	1	TH-P-818-BUH009	BALL BEARING	1
TH-P-818-RET010	BALL RETAINER	1	TH-P-818-HSG025	MOTOR HOUSING	1			

--If you need to order parts, please mark both Parts NO. and Description.--